

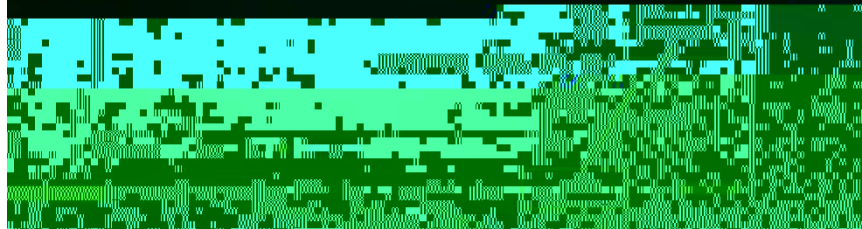
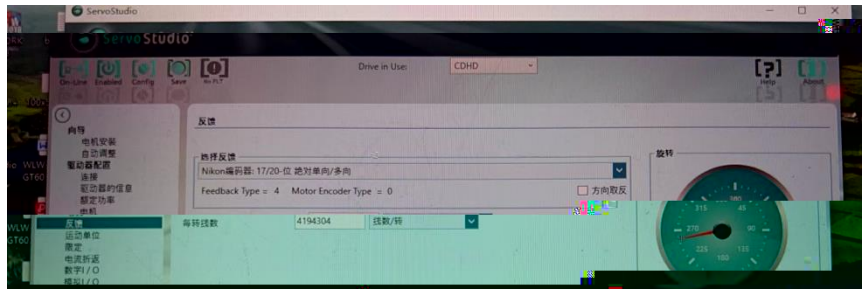


士。

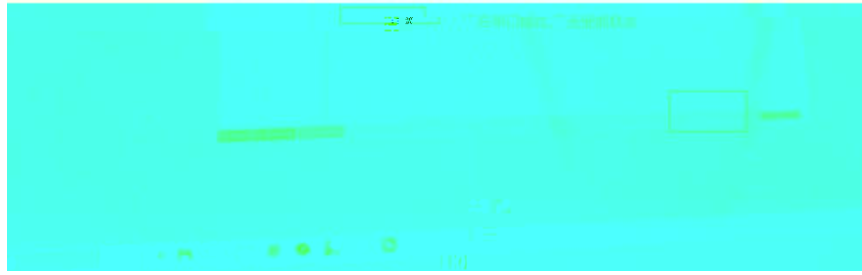

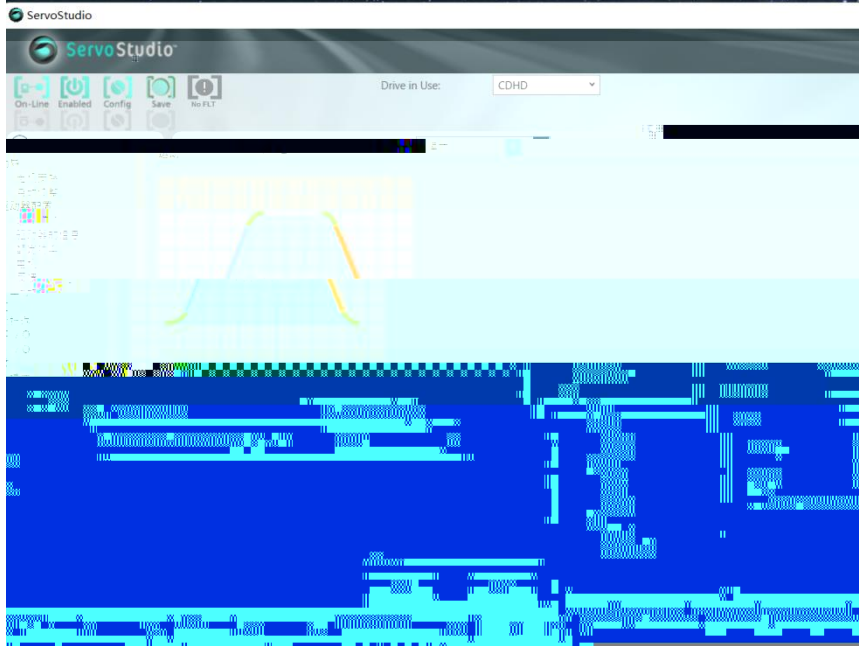

The middle screenshot shows the ServoStudio software interface with a detailed parameter configuration window open. The window is titled '参数设置' (Parameter Settings) and contains various tabs and fields. The '位置' (Position) tab is active, showing a table of parameters. The '速度' (Velocity) tab is also visible, showing a table of parameters. The '位置' tab table includes the following data:

值	单位
0.800	Hz
90.000	Hz
50.000	Hz
15.000	Hz
25.500	Hz
5000.000	Hz

The '速度' tab table includes the following data:

值	单位
332	Hz
1.800	Hz
18	Hz
0.182	Hz
1333	Hz
300	Hz
2000.000	Hz

The bottom status bar shows '80.000 counts', 'No Faults / No Warnings', 'Drive Active', 'Operation Mode 0', 'No Messages', 'Curr: 0.169 A', and 'Vel: 0.110 rpm'.

